
keep living

taylordolman PRESSALIT.





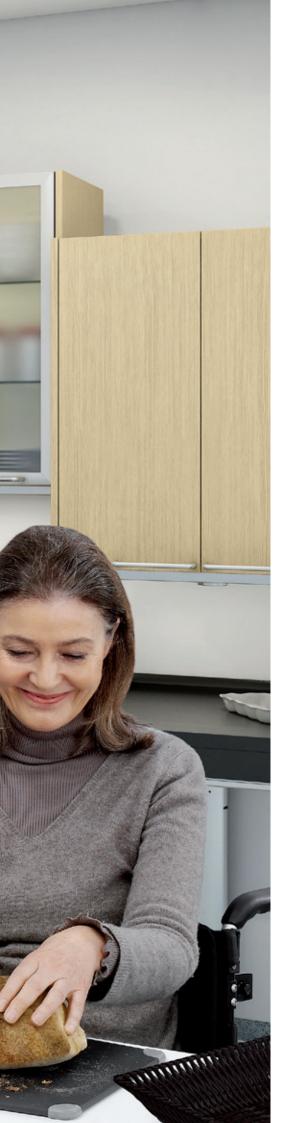

Flexible kitchens

Whether a kitchen is new, or one you have enjoyed for years, it only takes a few minor changes to make it flexible and accessible for all. Pressalit Care offers elegant and practical solutions that simplify and facilitate the process.

This brochure presents our products. In an Indivo kitchen, the height of all wall cupboards and worktops can be adjusted using special lifts, allowing both seated and standing users to work comfortably in the kitchen. The lifts suit most standard kitchen components, and can be used when installing a new kitchen or when retrofitting an existing kitchen for continued use.

We believe in functional and durable design with a focus on safety. Our philosophy is that reduced functional ability need not limit a person's life. All of our kitchen furnishings have a simple, elegant design based on this philosophy.

At Pressalit Care, we are dedicated to our designs and always available to provide guidance and advice.


keep living

All dimension specifications serve as a guide only. Pressalit Care shall not be liable for any misprints, technical changes or model deviations.

Practical kitchen design

Our kitchen solutions have been developed with a focus on the needs of the user and helpers and family members. This ensures that everyone can participate on an equal basis and feel secure.



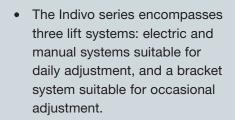



 Indivo systems can be fitted with worktops and wall cupboards from kitchen suppliers of your own choice.



- Wall cupboard lifts are discreetly positioned behind the cupboards, whether these are in their raised or lowered position.
- Whatever combination of tables and wall cupboards you wish to use, our safety systems provide the best possible security.
- For reasons of safety and aesthetics, we offer covers for water and electrical installations.



"

Safety is an important factor in a flexible kitchen. Pressalit Care's Indivo safety systems prevent crushing injuries, and ensure all kitchen users are in a safe environment.



- It can be difficult for people who are seated to reach the wall. It is therefore a good idea to install a power socket in the worktop edge.
- We recommend that the worktop should be 650-700 mm deep to provide sufficient space for a wheelchair.
- 3 Sinks and hobs should be insulated underneath to prevent burns to thighs and knees.
- Height-adjustable worktops should be fitted with safety bars to prevent crushing injuries.

Indivo lifts

Being able to adjust the height of worktops and wall cupboards is a great help for most people. Pressalit Care's specially designed Indivo lifts make it easy to design heightadjustable kitchens for a variety of uses:

- Communal kitchens and training kitchens, in which several people with different capabilities have to work together comfortably at the same time.
- Kitchens in individual homes, where self-reliant users have to be able to work, with or without helpers.
- Kitchens in child care institutions, where both children and adults have to be able to manage equally well.

Materials:

Aluminium: telescopic legs, cross braces, safety bars
Stål: brackets, wall-mounted lift motors, extension fittings
ABS-plast: cable trays, switches, safety plates



- Height-adjustable wall cupboards should be fitted with safety plates to prevent crushing injuries.
- D-shaped handles are the easiest to use especially for people with limited strength in their hands and arms.



Contents

Flexible kitchens	02 - 03
Practical kitchen design	04 - 05
Indivo lifts	06 - 07
Electric lifts – for worktops	08 - 09
Manual lifts – for worktops	10 - 11
Brackets - for worktops	12 - 13
Electric lifts – for freestanding worktops	14 - 15
Manual lifts – for freestanding worktops	16 - 17
Accessories – for worktop lifts	18 - 19
Electric lifts – for wall cupboards	20 - 21
Accessories - for wall cupboard lifts	22 - 23
Safety systems	24 - 25
Installation	26
Fitting	27



CE certification

Pressalit Care ensures that the products fulfil EU safety requirements.



Three year warranty

Pressalit Care undertakes to remedy material and manufacturing defects for a period of three years from the invoicing date.

3 Cup not wide

Cupboard doors should not be more than 300 mm wide, as they otherwise take up too much space in the room. Hinges should only open 180°.



An electric height-adjustable kitchen worktop is ideal in all situations where various users – both seated and standing – use the same kitchen. This is equally true in private homes as well as larger centres with common kitchen facilities such as group homes and care centres.

- Lift heights are adjusted via switches in the front edge.
- Operating switches can be placed wherever you want in the front edge.
- The switches are colour-coded aluminium to operate worktops, and red to operate wall cupboards.
- Electric worktop lifts can be adjusted in height over a range of 280 mm.



Switches for adjusting the heights of wall cupboards and worktops can be set into the worktop's front edge.



An optional hand-held control may be purchased as an alternative or supplement to the edge switches.



3 Electric heightadjustable kitchen worktops should be fitted with a safety bar to prevent crushing injuries.



Useful information

The front edge of the worktop should be as narrow as possible, but must be at least 70 mm to permit installation of height adjustment switches.

Sinks and hobs should be insulated underneath to prevent burns to thighs and knees.

Lifts are available for worktops of any length, up to a maximum of 3000 mm.

A flexible feed/waste system must be ordered for worktops containing sinks.

Maximum load (evenly distributed): 100 kg, including worktop.

PRESSALIT. care

RK1010

Electric lift for worktop, 600 - 1000 mm.

Height-adjustable 280 mm.

Including 2 telescopic legs, 2 brackets, cross

brace and switch.


RK1011

Electric lift for worktop, 1001 - 1400 mm.

Height-adjustable 280 mm.

Including 2 telescopic legs, 2 brackets, cross

brace and switch.

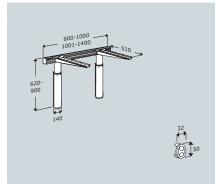




RK1012

Electric lift for worktop, 1401 - 2000 mm.

Height-adjustable 280 mm.

Including 2 telescopic legs, 3 brackets, cross

brace and switch.

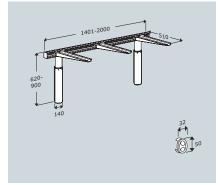




RK1013

Electric lift for worktop, 2001 - 2400 mm.

Height-adjustable 280 mm.

Including 2 telescopic legs, 4 brackets, cross

brace and switch.

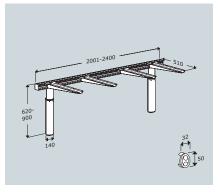




RK1014

Electric lift for worktop, 2401 - 3000 mm.

Height-adjustable 280 mm.

Including 2 telescopic legs, 5 brackets, cross

brace and switch.

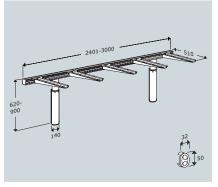










Bracket




RK1045

Hand-held control



RK1043

Installation cover



RK9061

RK9071

Flexible feed/waste system



RK1044 RK1050 Bracket for fitting edge Cable tray

There is more information about accessories on pages 18-19.

SafetyThere is more information about safety systems on pages 24-25.

Installation See pages 26-27.



Kitchen worktops which can be adjusted in height using a crank handle are the budget solution for kitchens catering to both seated and standing users. These are most commonly used in kitchens which do not require frequent, daily adjustment.

- Manual lifts are adjusted in height using a crank handle.
- They can be used with worktops, with or without an edge.
- The crank handle socket can be positioned anywhere along the front edge, except under a sink or hob.
- Manual worktop lifts can be adjusted in height over a range of 300 mm.



For worktops with an edge, a cover plate protects the crank handle socket.



The longitudinal shafts can be covered using a cable tray.



The crank handle can be fastened under the worktop when not in use. This keeps the crank handle out of the way, and avoids it being misplaced.



Useful information

If an edge is desired under the worktop, this should be as narrow as possible, but must be at least 100 mm to allow room for the crank handle.

A flexible feed/waste system must be ordered for worktops containing sinks.

Lifts are available for worktops of any length, up to a maximum of 3000 mm.

Sinks and hobs should be insulated underneath to prevent burns to thighs and knees.

Maximum load (evenly distributed): 100 kg, including worktop.

PRESSALIT. care

RK1110


Manual lift for worktop, 600 - 1000 mm.

Height-adjustable 300 mm. Including 2 telescopic legs, 2 brackets, cross brace and crank handle.

RK1111

Manual lift for worktop, 1001 - 1400 mm.

Height-adjustable 300 mm. Including 2 telescopic legs, 2 brackets, cross brace and crank handle.

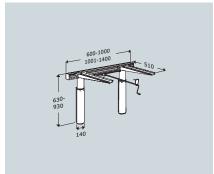




RK1112

Manual lift for worktop, 1401 - 2000 mm.

Height-adjustable 300 mm. Including 2 telescopic legs, 3 brackets, cross brace and crank handle.

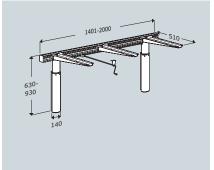




RK1113

Manual lift for worktop, 2001 - 2400 mm.

Height-adjustable 300 mm. Including 2 telescopic legs, 4 brackets, cross brace and crank handle.

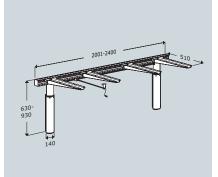




RK1114

Manual lift for worktop, 2401 - 3000 mm.

Height-adjustable 300 mm. Including 2 telescopic legs, 5 brackets, cross brace and crank handle.

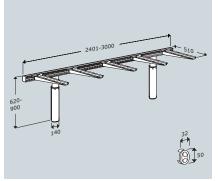








RK1040

Bracket


RK1041

Collapsible crank handle



RK1043

Installation cover



RK9061

Flexible feed/waste system

RK9071

RK1044 RK1050

Bracket for fitting edge Cable tray

There is more information about accessories on pages 18-19.

SafetyThere is more information about safety systems on pages 24-25.

Installation See pages 26-27.



Brackets are the simple, budget solution for kitchens where it is only occasionally necessary to adjust the height of the worktop or adapt the kitchen layout to a given user.

- The lift height is adjusted using a spanner.
- Height adjustment can be performed by one person alone.
- Brackets for worktops can be adjusted in height over a range of 250 mm.



The height is adjusted by loosening a screw on each bracket.



The vertical section of the bracket is clearly marked with a height indicator, to ease adjustment.



Useful information

A flexible feed/waste system must be ordered for worktops containing sinks.

The distance between two brackets must not exceed 800 mm.

Brackets are available for worktops of any length.

Sinks and hobs should be insulated underneath to prevent burns to thighs and knees.


Maximum load (evenly distributed): 75 kg, including worktop.

PRESSALIT. care

RK1100

Bracket for worktop 600 - 1400 mm.

Height-adjustable 250 mm. Including 2 wall fittings and 2 brackets.

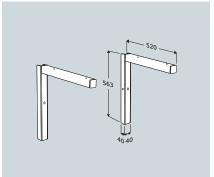




RK1101

Bracket for worktop.

Worktops greater than 1400 mm in length require an extra bracket for every 800 mm.

Height-adjustable 250 mm. Including 1 wall fitting and 1 bracket

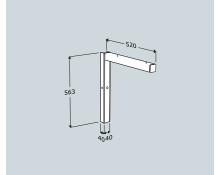



Accessories



RK1043

Installation cover

RK9061

RK9071

Flexible feed/waste system

There is more information about accessories on pages 18-19.

Installation See pages 26-27.



- for freestanding worktops A freestanding electric Indivo solution is a flexible work or dining table, primarily intended for use in the kitchen. The height of the worktop can be quickly and easily adjusted to the given user or situation.

A freestanding worktop can also be used in rooms in which the walls are not strong enough to support the wall-mounted models.

- Lift heights are adjusted via switches set in the edge or directly under the worktop.
- Operating switches can be placed anywhere.
- The design of the legs and feet make the table stable and secure, and ensure the lift causes minimal inconvenience to wheelchair users.
- The design of the lift makes it possible to use the worktop from all sides.
- Electric lifts for freestanding worktops can be adjusted in height over a range of 300 mm.



A switch to adjust the height of the worktop can be set into the worktop edge.



2 For worktops without an edge, a switch may be mounted under the worktop.



3 Electric heightadjustable kitchen worktops should be fitted with a safety bar to prevent crushing injuries.



Useful information

If an edge is fitted under the worktop, this should be as narrow as possible, but must be at least 70 mm to allow room for the height adjustment switches.

Lifts are available for worktops of any length, up to a maximum of 3000 mm, and in widths between 700-1000 mm.

For worktops without an edge, safety bars may be mounted directly under the worktop.

Maximum load (evenly distributed): 100 kg, including worktop.


PRESSALIT. care

RK1081

Electric lift for freestanding worktop. For worktops from 1400 - 2000 mm.

Height-adjustable 300 mm. Including 2 telescopic legs, longitudinal and cross braces and switch.

Pressalit Care recommends an overhang of 200 mm at both ends of the table to leave room for wheelchair users.

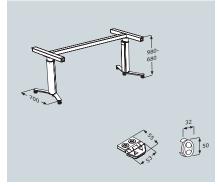




RK1082

Electric lift for freestanding worktop. For worktops from 2001 - 2400 mm.

Height-adjustable 300 mm. Including 2 telescopic legs, 2 brackets, longitudinal and cross braces and switch.

Pressalit Care recommends an overhang of 400 mm at both ends of the table to leave room for wheelchair users.

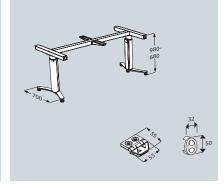




RK1083

Electric lift for freestanding worktop. For worktops from 2401 - 3000 mm.

Height-adjustable 300 mm. Including 2 telescopic legs, 2 brackets, longitudinal and cross braces and switch.

Pressalit Care recommends an overhang of 400 mm at both ends of the table to leave room for wheelchair users.

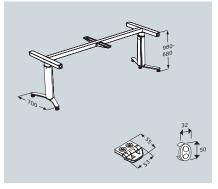



Accessories



RK1044

Bracket for fitting edge There is more information about accessories on pages 18-19.

Safety
There is more information about safety systems on pages 24-25.



- for freestanding worktops A manual, freestanding Indivo solution is the budget choice when you need a work or dining table which can be adapted to the given user or situation.

A freestanding worktop can also be used in rooms in which the walls are not strong enough to support the wall-mounted models.

- · Lifts are adjusted in height using a crank handle.
- Manual lifts may be used with worktops with or without an edge.
- The design of the legs and feet make the table stable and secure, and ensure the lift causes minimal inconvenience to wheelchair users.
- The crank handle socket can be positioned anywhere along the long sides of the worktop.
- Manual worktop lifts can be adjusted in height over a range of 300 mm.



For worktops with an edge, a cover plate protects the crank handle socket.



The crank handle can be fastened under the worktop when not in use. This keeps the crank handle out of the way, and avoids it being misplaced.



Useful information

If an edge is fitted to the worktop, this should be as narrow as possible, but must be at least 100 mm to allow room for the crank handle.

Lifts are available for worktops of any length, up to a maximum of 3000 mm, and in widths between 700-1000 mm.

For worktops without an edge, a collapsible crank handle may be purchased.

Maximum load (evenly distributed): 100 kg, including worktop.

PRESSALIT.

RK1181

Manual lift for freestanding worktop. For worktops from 1400 - 2000 mm.

Height-adjustable 300 mm. Including 2 telescopic legs, longitudinal and cross braces and crank handle.

Pressalit Care recommends an overhang of 200 mm at both ends of the table to leave room for wheelchair users.






RK1182

Manual lift for freestanding worktop. For worktops from 2001 - 2400 mm.

Height-adjustable 300 mm. Including 2 telescopic legs, 2 brackets, longitudinal and cross braces and crank handle.

Pressalit Care recommends an overhang of 400 mm at both ends of the table to leave room for wheelchair users.

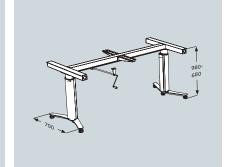




RK1183

Manual lift for freestanding worktop. For worktops from 2401 - 3000 mm.

Height-adjustable 300 mm. Including 2 telescopic legs, 2 brackets, longitudinal and cross braces and crank

Pressalit Care recommends an overhang of 400 mm at both ends of the table to leave room for wheelchair users.

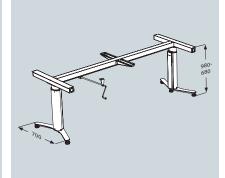



Accessories





RK1041

Collapsible crank handle

RK1044

Bracket for fitting edge There is more information about accessories on pages 18-19.

Safety
There is more information about safety systems on pages 24-25.




Indivo worktop lifts can be supplemented using our broad range of accessories, to improve safety, comfort and aesthetics in the kitchen.

RK1040

Bracket for worktop.

Extra bracket for reinforcing heavy worktops or worktops including sink or hob

NB: May be used with wall-mounted electric and manual lifts.

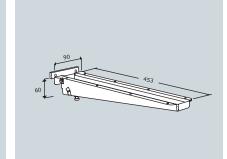




RK1045

Hand-held control for lifts for worktops/ wall cupboards

Cable length: 1600 mm

NB: Not suitable for freestanding worktops.

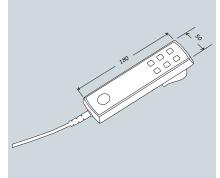




RK1041

Collapsible crank handle.

Crank handle for worktop without a front edge.

Can be folded away under worktop. Not visible below worktop.

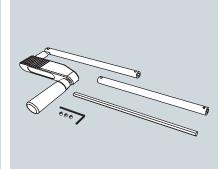




RK1050

Cable tray for wall-mounted worktop lift, 2000 mm.

Conceals and protects cables for electric lifts, and shafts for manual lifts.

NB: Not suitable for freestanding worktops.

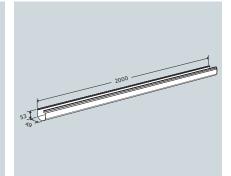






Electric lifts

- for wall cupboards

Wall cupboards may be moved diagonally, that is both vertically and towards the user. This makes it easy for seated users and children to see and access covered contents.

Height-adjustable wall cupboards provide extra storage options in kitchens where cupboards cannot be installed under worktops out of consideration for seated users.

- Lift heights for wall cupboards are adjusted via switches in the front worktop edge.
- Operating switches can be placed wherever you want along the front edge.
- The switches are colour-coded aluminium to operate worktops, and red to operate wall cupboards.
- The design of the lifts ensures that the lift motors are as discreet as possible, regardless of the cupboard position.
- When the wall cupboards are lowered 430 mm to their lowest position, they are also extended 180 mm towards the user.

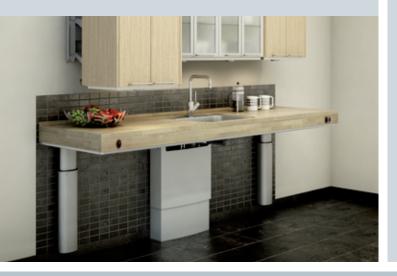

A switch to adjust the height of the wall cupboard can be set into the worktop edge.



An optional hand-held control may be purchased as an alternative or supplement to the edge switches.



3 Electric heightadjustable wall cupboards should be fitted with a safety plate to prevent crushing injuries.



Useful information

The lifts are compatible with wall cupboards with a height of 500-704 mm. Adapter kits are available for cupboards with heights outside this range. See pages 22-23.

For safety reasons, cooking hoods and wall cupboards above a cooking hob should not be adjustable in height.

Lighting can be installed underneath the safety plates.

Lamps should not generate so much heat that they can damage the worktop when the wall cupboard is lowered. Wall cupboard lifts can support wall cupboard combinations with a total length of up to 2400 mm.

Maximum load (incl. cupboard):


1 lift motor: 110 kg, 2 lift motors: 220 kg.

PRESSALIT. care

RK1020

Electric lift for wall cupboards, 400 - 1200 mm.

Diagonally adjustable 430/180 mm. Including 1 lift motor, 2 cross braces and switch.

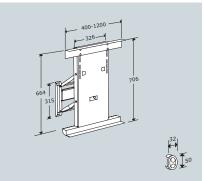





RK1021

Electric lift for wall cupboards, 1201 - 2400 mm.

Diagonally adjustable 430/180 mm. Including 2 lift motors, 2 cross braces and switch.

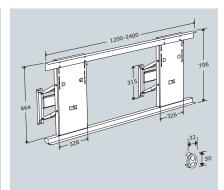



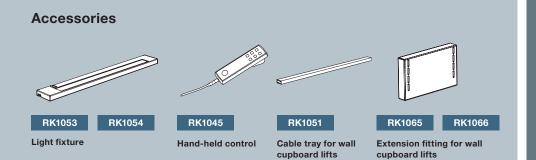

Mounting kit for cover plate for RK1020.

Mounting kit for cover plate for RK1021. RK1060 RK1061 There is more information about accessories on pages 22-23.

SafetyThere is more information about safety systems on pages 24-25.



Accessories for Indivo wall cupboard lifts provide the flexibility to install cupboards with different heights. Accessories also allow aesthetic and safety factors in the kitchen to be optimised.

RK1053

Light fixture with manual power switch, 340 mm.


Supplied mounted on safety plate RK1031/RK1032 (not incl.).

Including 8W fluorescent tube.

RK1054

Light fixture with manual power switch, 555 mm.

Supplied mounted on safety plate RK1031/RK1032 (not incl.). Including 13W fluorescent tube.

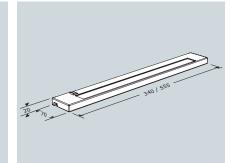




RK1045

Hand-held control for lifts for worktops/ wall cupboards

Cable length: 1600 mm.

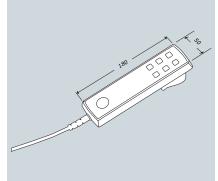




RK1051

Cable tray for wall cupboard lift, 2000 mm.

Conceals and protects cables for wall cupboard lifts.

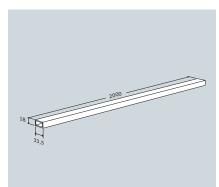



RK1065


Extension fitting for RK1020 lift, 1 pc.

For installing cupboards higher than 704 mm

RK1066

Extension fitting for RK1021 lift, 2 pcs.

For installing cupboards higher than 704 mm

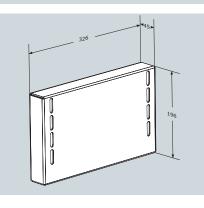





RK1060 Mounting kit for cover plates for RK1020. For covering lifts for cupboards under 690 mm in height Mounting kit for cover plates for RK1021. For covering lifts for cupboards under 690 mm in height	RK1060

Safety systems

When you install a height-adjustable system, it is important to think about safety. In the case of worktops, the primary focus is on preventing personal injury – to legs and knees. When a wall cupboard is lowered, the primary risk is damage to equipment or kitchenware. We therefore recommend that an appropriate safety system be installed.

- A pressure-sensitive safety bar installed under the edge of a worktop suspends downward movement if resistance is encountered, and raises it 10-30 mm.
- A pressure-sensitive safety plate installed under wall cupboards suspends downward movement if resistance is encountered, and raises them 10-30 mm.
- The safety systems on several lifts can be linked.
 For example, if there is a jar on a worktop and the worktop is raised, the wall cupboard's safety plate will register the impact, even though it is the worktop which is active.



The microswitches in the safety plate register even slight pressure.



The microswitches in the safety bar register even slight pressure.



Useful information

With reference to the Danish working environment regulations and the risk of crushing injury, Pressalit Care recommends a minimum distance of 25 mm between the worktop and wall in a corner installation, or between adjacent worktop sections.


Contact Pressalit Care for specification of interconnected systems involving combinations of worktops and wall cupboards other than those listed on page 25 (RK1070-RK1072).

PRESSALIT.




Installation

Power sockets should be positioned between the telescopic legs, at a height of 500 mm above the floor. This applies to the following lifts:

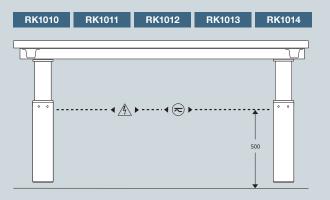

Water and drain connection points should be positioned as specified below. This applies to the following lifts:

RK1010	RK1011	RK1012	RK1013	RK1014
RK1110	RK1111	RK1112	RK1113	RK1114

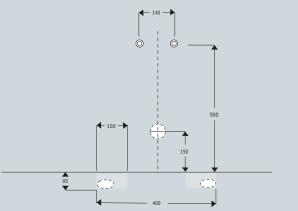


To avoid damage to electricity or water systems and ensure the lifts are able to move freely, it is important that they are positioned correctly, and that applicable national laws and regulations are complied with.



Power sockets should be placed within the marked regions for the following wall cupboard lifts. The control box may be placed either on the left or right side of the unit:




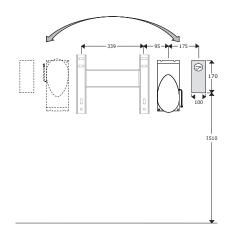





With respect to the lifts, it is important to comply with the following measurements when making cut-outs, etc. in worktops.

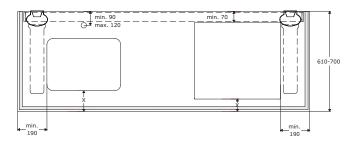

Fitting



Lifts for worktops and wall cupboards can be directly installed onto concrete or brick walls.

Always use reinforcement when installing onto weaker walls such as gypsum board.




Recommended installation height for the following lifts:

RK1010	RK1011	RK1012	RK1013	RK1014
RK1110	RK1111	RK1112	RK1113	RK1114




Recommended installation height for the following lifts:



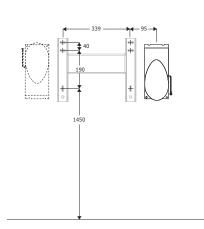


Recommended installation height for the following lifts:

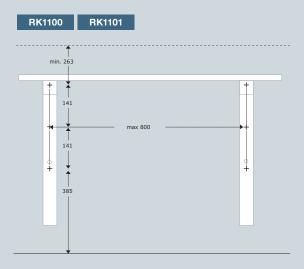

For detailed information, please refer to our installation guidelines, which and be downloaded from www.pressalitcare.com

PRESSALIT. Care

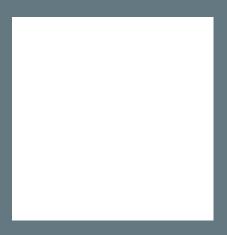

Pressalit Care is a leader in furnishings for people with physical disabilities. It is our philosophy that the environment should be used to compensate for people's physical limitations. Our kitchen and bathroom solutions take this fundamental idea down to the smallest detail.

We have 35 years of experience in the Health Care industry and have worldwide operations.

Pressalit Care has its head office in Denmark.

www.pressalit.com

keep living







tel: 0845 838 0600 email: info@taylordolman.com www.taylordolman.com